Installatio









Professional installation recommends

Tools:

pincher



ratchet wrench insulated rubber tape

Plast

Plastic warped board




Attention:

We highly recommend you to find professional store to install the product.

Attention:

If not follow the instruction may damage the ECU, motor or the car.

Accessories List

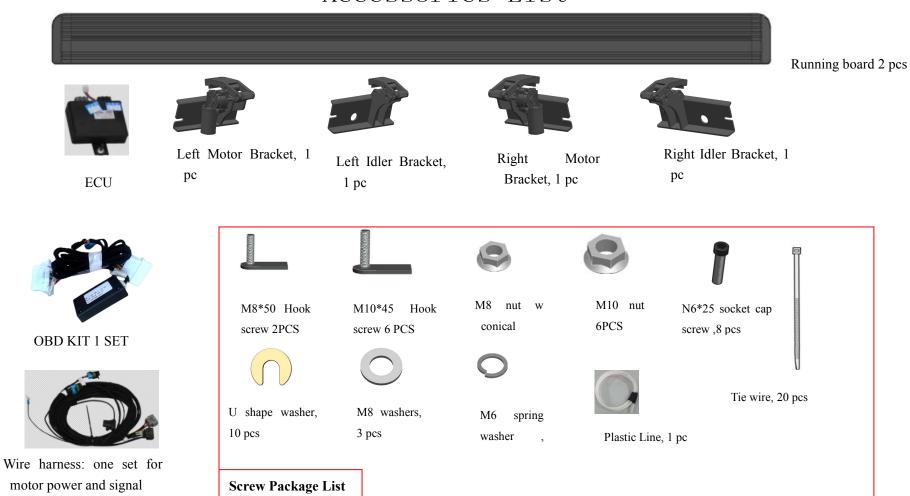

1. Install ECU, OBD and wiring



1) Open engine compartment and find the battery




4) connect positive pole to the car inside



2) take out fuse



5) Connect negative pole of the car

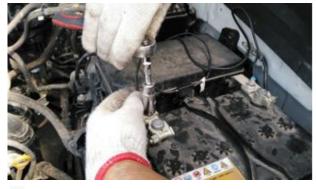

3) connect positive pole of a battery CAUTION!: Tighten battery screw very tight! If loose, may get damage to the car.



6) fix the ECU behind the steering column



7) Lift off the carpet on the left side



10) Pry the panel of air conditioning controller



8) Find this hole on the left



11) Remove the surrounding screws




9) Wear the right motor line to the right side




12) Remove this plug and insert it with the plug we offer

13)use tape to proctect all plugs, insert ECU, connect OBD line with ECU connector, insert fuse to test if motor work well

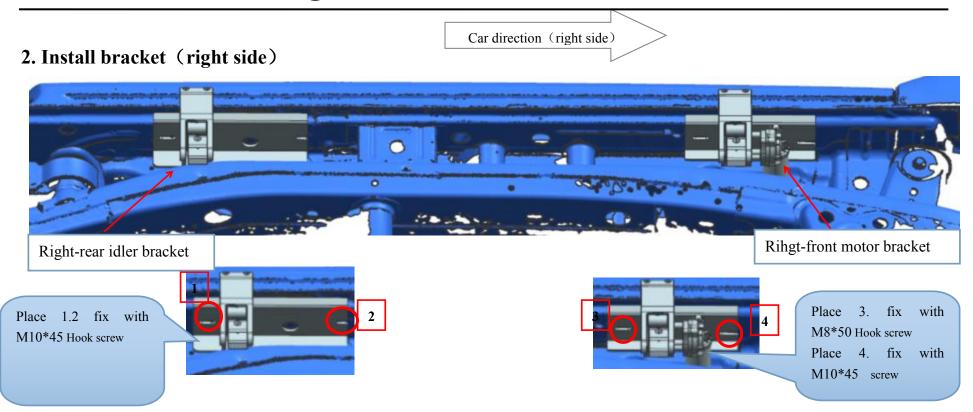


KEEP ALL SCREWS A LITTLE LOOSE, SO THAT BRACKET CAN MOVE WITH RUNNING BOARD!!!

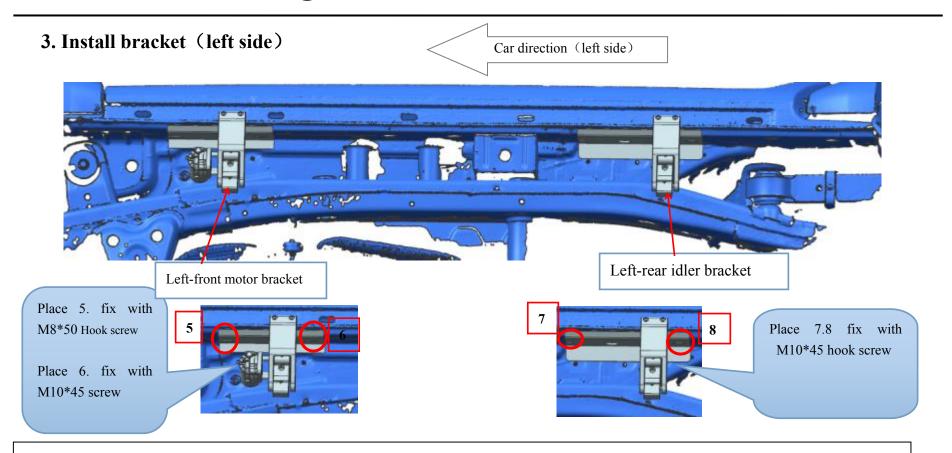

KEEP ALL SCREWS A LITTLE LOOSE, SO THAT BRACKET CAN MOVE WITH RUNNING BOARD!!!


4. Install right side running board (left and right side are in same way)

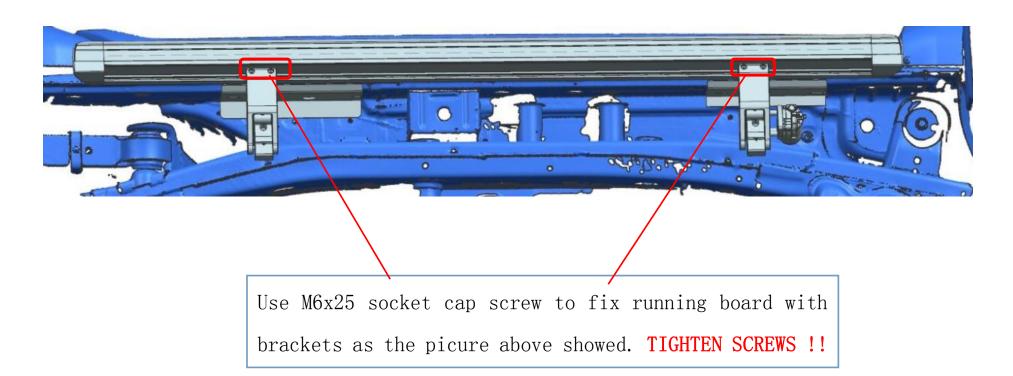

5. Testing and adjust brackets and screws to keep the balance



1) Insert fuse again. Then open and close doors to let step work. To assure them up and down freely to adjust position by itself.

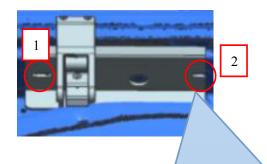

2) place 1 & 2: Fasten the screws on the brackets; the rest of three brackets as same as this one;If still not balance, use U shape washer

to adjust it.






Installation completion effect



To lift the car as showed



To lift the car

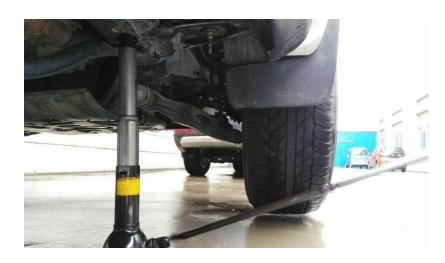

To changing tire

Automatic power deploy:

The running boards will extend down and out when the door is opened.

Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.

Manually set in the deployed (OUT) position for access to the roof:

Step your foot while at the same time closing the door. To resume normal operation, open and close the door.

Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to avoid spraying the motors directly. After washing, apply silicone spray lubricant to the hinge pivot pins.

Caution! Keep hands and feet away when the running board is in motion.